



## Wiring MEC 9 mm Mini Potentiometers

While the ground connection on classic potentiometers is often soldered to the metal back of the potentiometer, this is not possible or necessary with the 9 mm Mini Potentiometers. With these potentiometers, contact with the shielding foil in the electrical compartment / on the back of the pickguard is sufficient. The wiring depends on the function of the potentiometer in the circuit configuration.

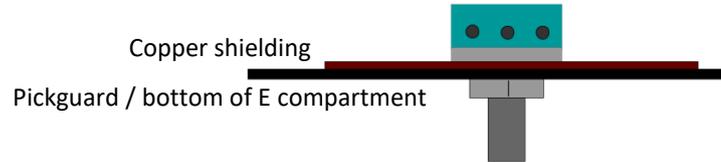

### Wiring as Volume Control (M 82250 Mono B 250K)

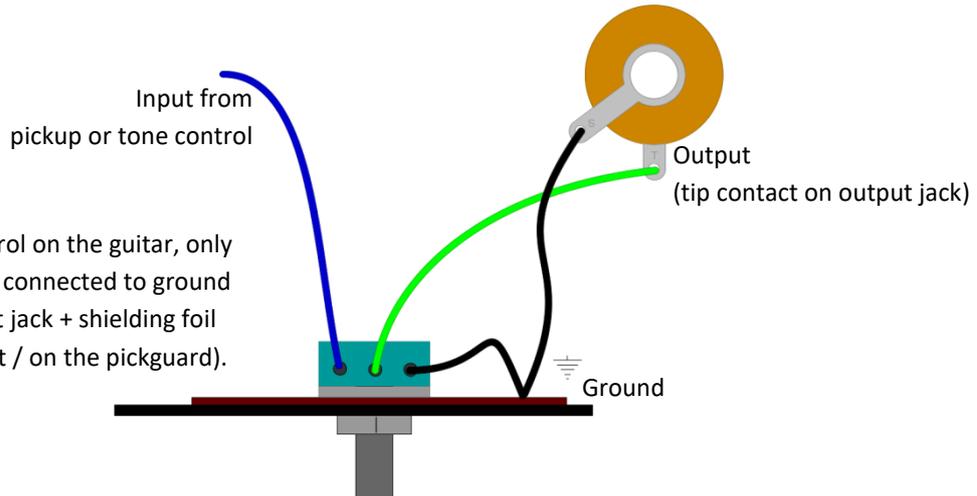

When used as a volume control on the guitar, only pin 1 of the potentiometer is connected to ground (= shaft contact of the output jack + shielding foil in the electrical compartment / on the pickguard).